

Type K - Measuring Probe (NiCr-Ni) With DIN-type flat-pin plug

-65 °C
+550 °C

GAF 200

Art. no. 600522
Asphalt probe
-65 ... +550 °C



for liquid or soft media etc.
V4A tube 8 mm dia. reduced to 3 mm, plastic handle, anti-buckling glanding, spiral cable stretchable to 1.2 m, DIN-type flat-pin plug

Response time T₉₀: water 0.4 m/s approx. 6 s

-50 °C
+200 °C

GRF 200

Art. no. 604663
Tire probe
-50 ... +200 °C




fast response insertion probe with stop screw (needle adjustable 0 ... approx. 14 mm). Suitable for measuring temperature of tires and other soft media. Plastic handle, anti-buckling glanding, spiral cable (approx. 1.2 m drawn out), miniature flat plug

Response time T₉₀: approx. 5 s

-65 °C
+150 °C

GTZ 300

Art. no. 603287
Clip-on probe
-65 ... +150 °C

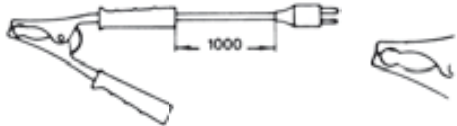

for temperature measurements at tube surfaces
for tubes up to approx. 25 mm Ø, 1 m silicone cable, miniature flat plug

Response time T₉₀: approx. 3 s

-65 °C
+300 °C

GTF 300

Art. no. 600072
Wire probe for quick-response measurements
Measuring tip twisted/fused




GTF 300-UV

Art. no. 600081
Wire probe for quick-response measurements
Measuring tip non-twisted/fused



GTF 300-SP

Art. no. 605973
Wire probe for quick-response measurements
Measuring tip with weld bead
-65 ... +300 °C, insulation up to +250 °C

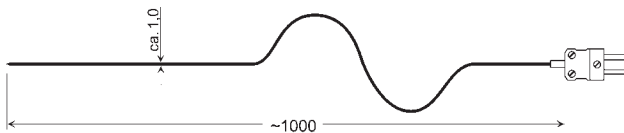

for air, gases, diminutive surfaces
Teflon-insulated twisted Ø 0.2 mm thermocouple wires, fused measuring tip, very flexibel, miniature flat plug

Response time T₉₀: water 0,4 m/s approx. 0.3 s

-65 °C
+400 °C

GTF 300 GS

Art. no. 602554
Wire probe for quick-response measurements
twisted measuring tip




GTF 300 GS-UV

Art. no. 607893
Wire probe for quick-response measurements
Measuring tip non-twisted/fused



GTF 300 GS-SP

Art. no. 606208
Wire probe for quick-response measurements
Measuring tip with weld bead
-65 ... +400 °C

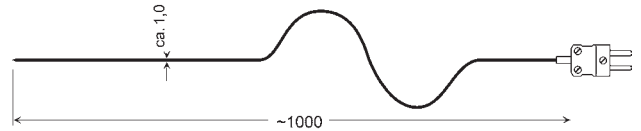

for air, gases, diminutive surfaces (not for liquids)
glass filament insulated Ø 0.2 mm thermocouple wires, miniature flat plug


Response time T₉₀: water 0.4 m/s approx. 0.3 s

Additional charge for any length per m

-65 °C
+250 °C

GMF 250

Art. no. 600071
Magnetic surface probe
-65 ... +250 °C

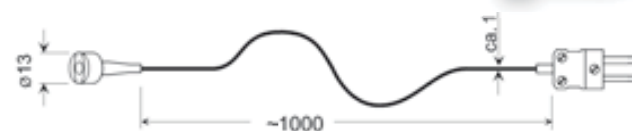

self-adhesive on magnetic materials, spring-loaded CU plate Ø 5 mm, 1 m Teflon-insulated twisted cable, miniature flat plug

Response time T₉₀: approx. 5 s

-65 °C
+200 °C

GMF 200

Art. no. 601377
Magnetic surface probe
-65 ... +200 °C




self-adhesive on magnetic materials (higher magnetic holding force), spring-loaded CU plate Ø 5 mm, resilient 2 m long silicone cable, miniature flat plug

Response time T₉₀: approx. 5 s

-65 °C
+200 °C

GGF 200

Art. no. 603418
Probe for deep-frozen products
-65 ... +200 °C

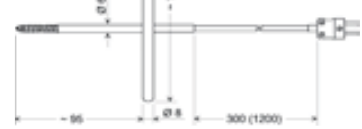

to screw into deep-frozen products, etc. no predrilling required, V4A-tube, 6 mm Ø with screw prod, spiral cable (approx. 1.2 m drawn out), DIN-type flat-pin plug

Response time T₉₀: approx. 15 s